How to Replace All Hoses

Tools Required:

Hose Clamp Removal Pliers
Medium Phillips Screw Driver
1/8” Hex Head Allen Key
10” Block of 2x4
5/16 Nut Driver

1. Remove the two 1/8 Hex head screws from the patient side of the Pulmonex.

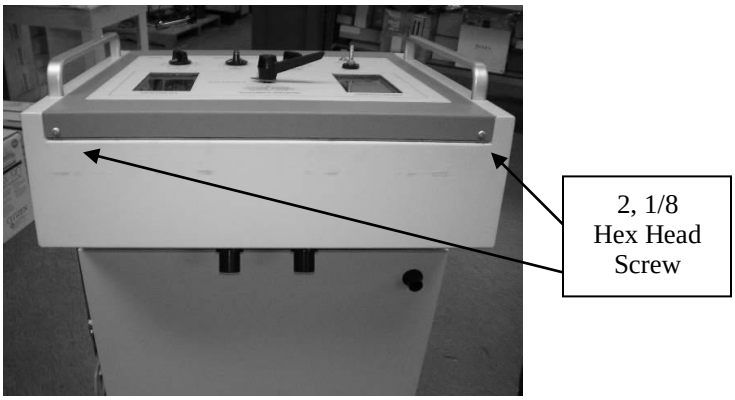

2. Drop down the Draw and Remove the 2 Phillips Head Screws from the front of the system.

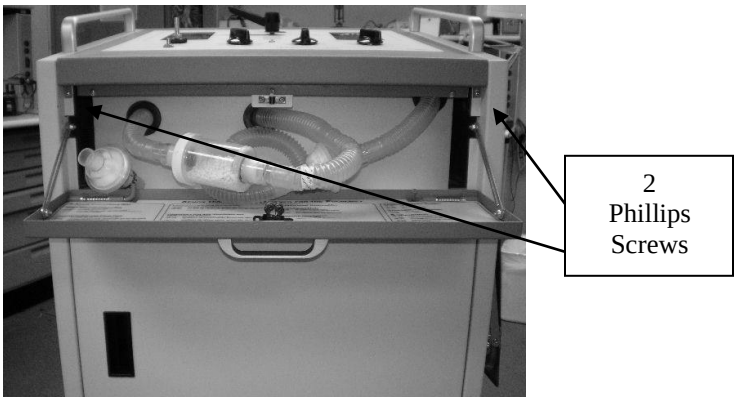

3. Disconnect the Hose from the Drierite container and pull through to the bottom cabinet. This will keep the hose from getting crushed when you move the top forward.

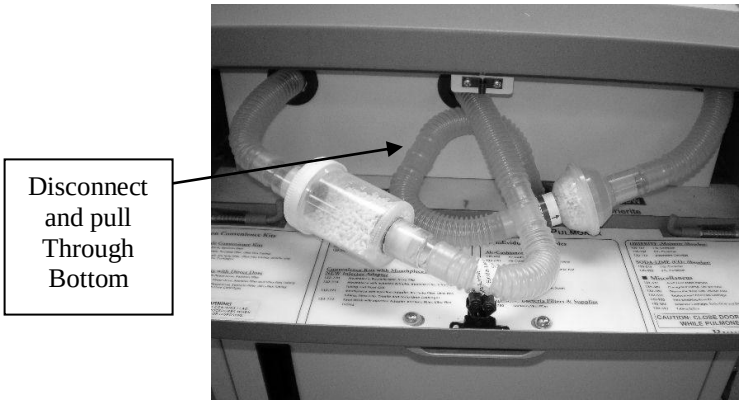

4. Lift the Pulmonex Top up and slide it forward. Disconnect the internal hoses with a 5/16 Nut Driver and disconnect the power connectors.

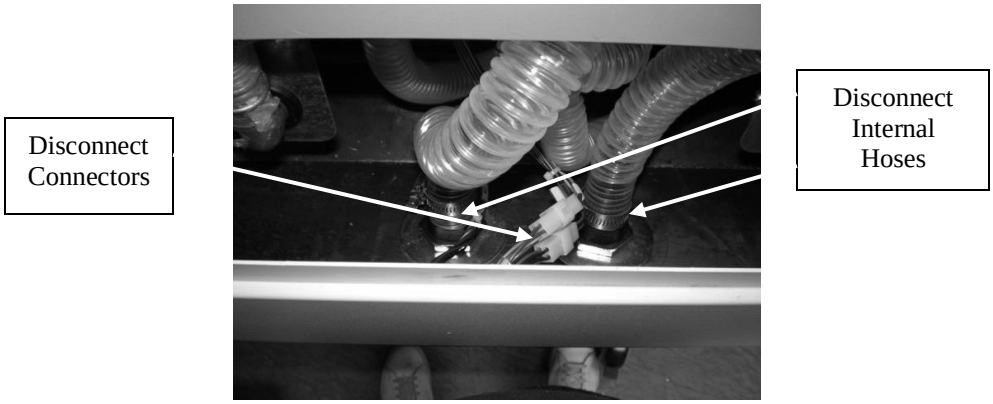

5. Once you disconnect the Internal Hoses you can remove the top and put it on a table to work on.

6. Below are photographs that show where the hoses are connected individually. Just follow the picture to replace each hose. When you remove all the hoses make sure to clean the connector that the hose is on completely. If there is sealant on the connector there will be a chance for a leak.

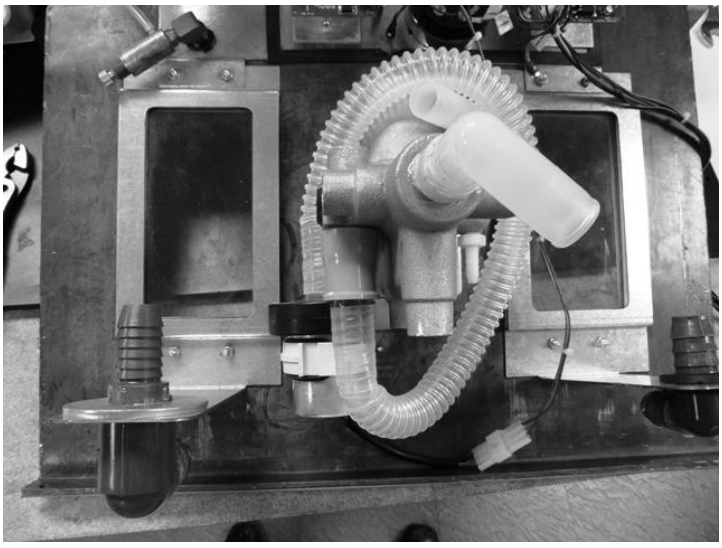

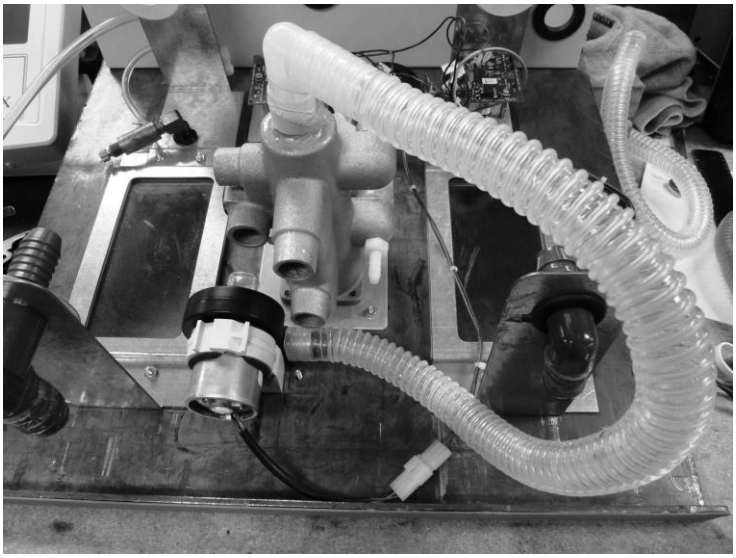

Soda-Lime Hose

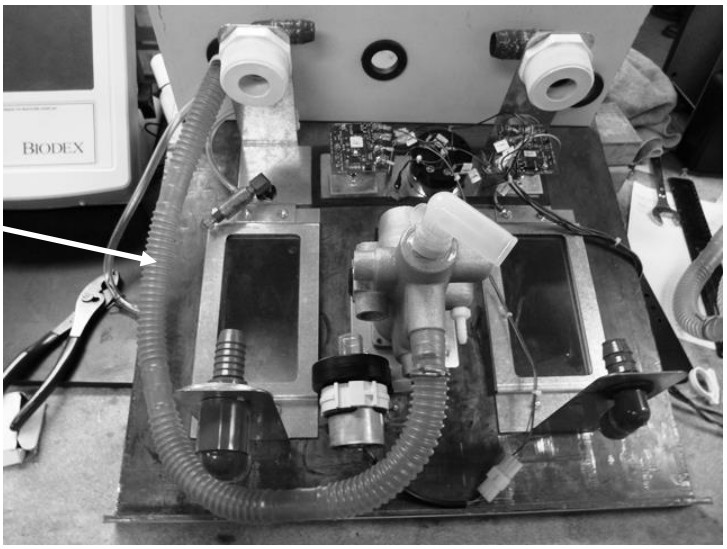

Soda-Lime Hose

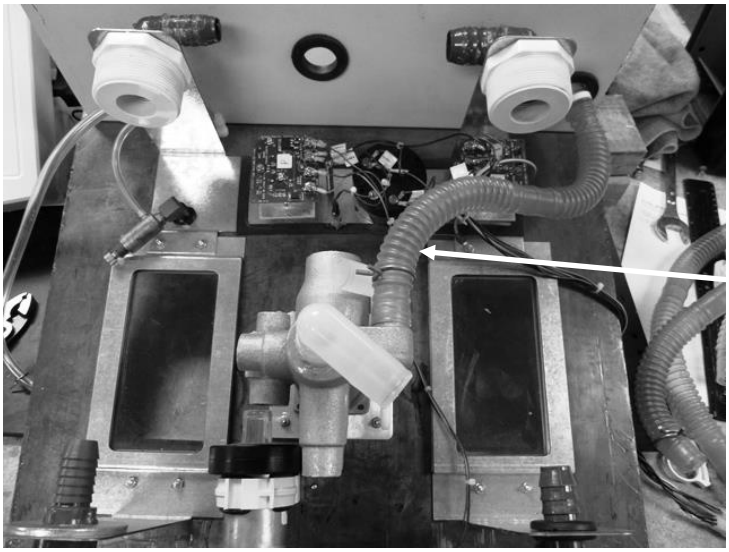

Drierite Hose

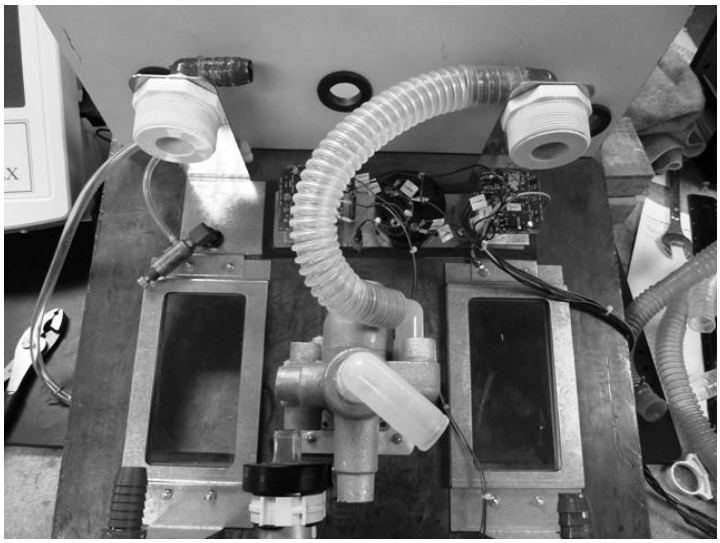

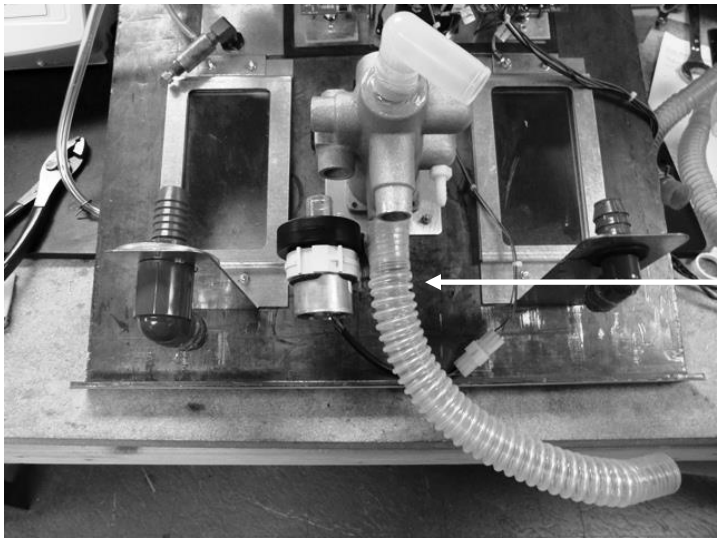

To Patient Hose

From Patient Hose

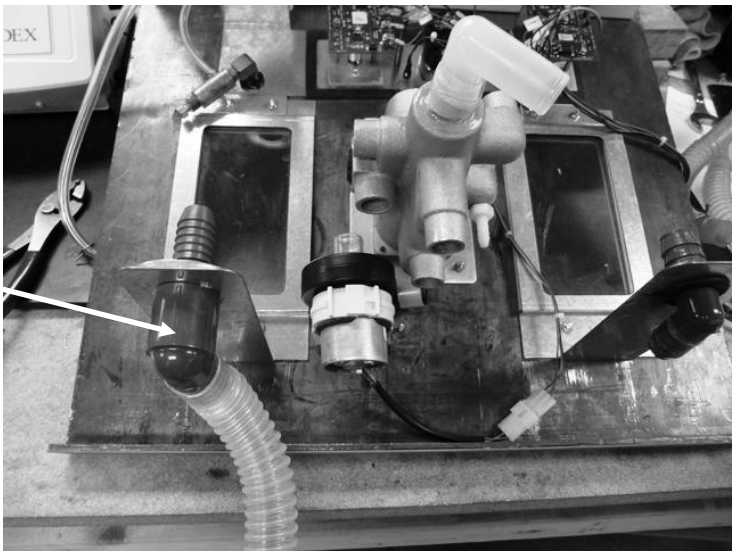

Please call 631-924-9000 x2803 if you have any questions or problems.